TOP AND CONSOLE PARTS

For Model: 1CWGD5300SQ0
(White)

29"GAS DRYER

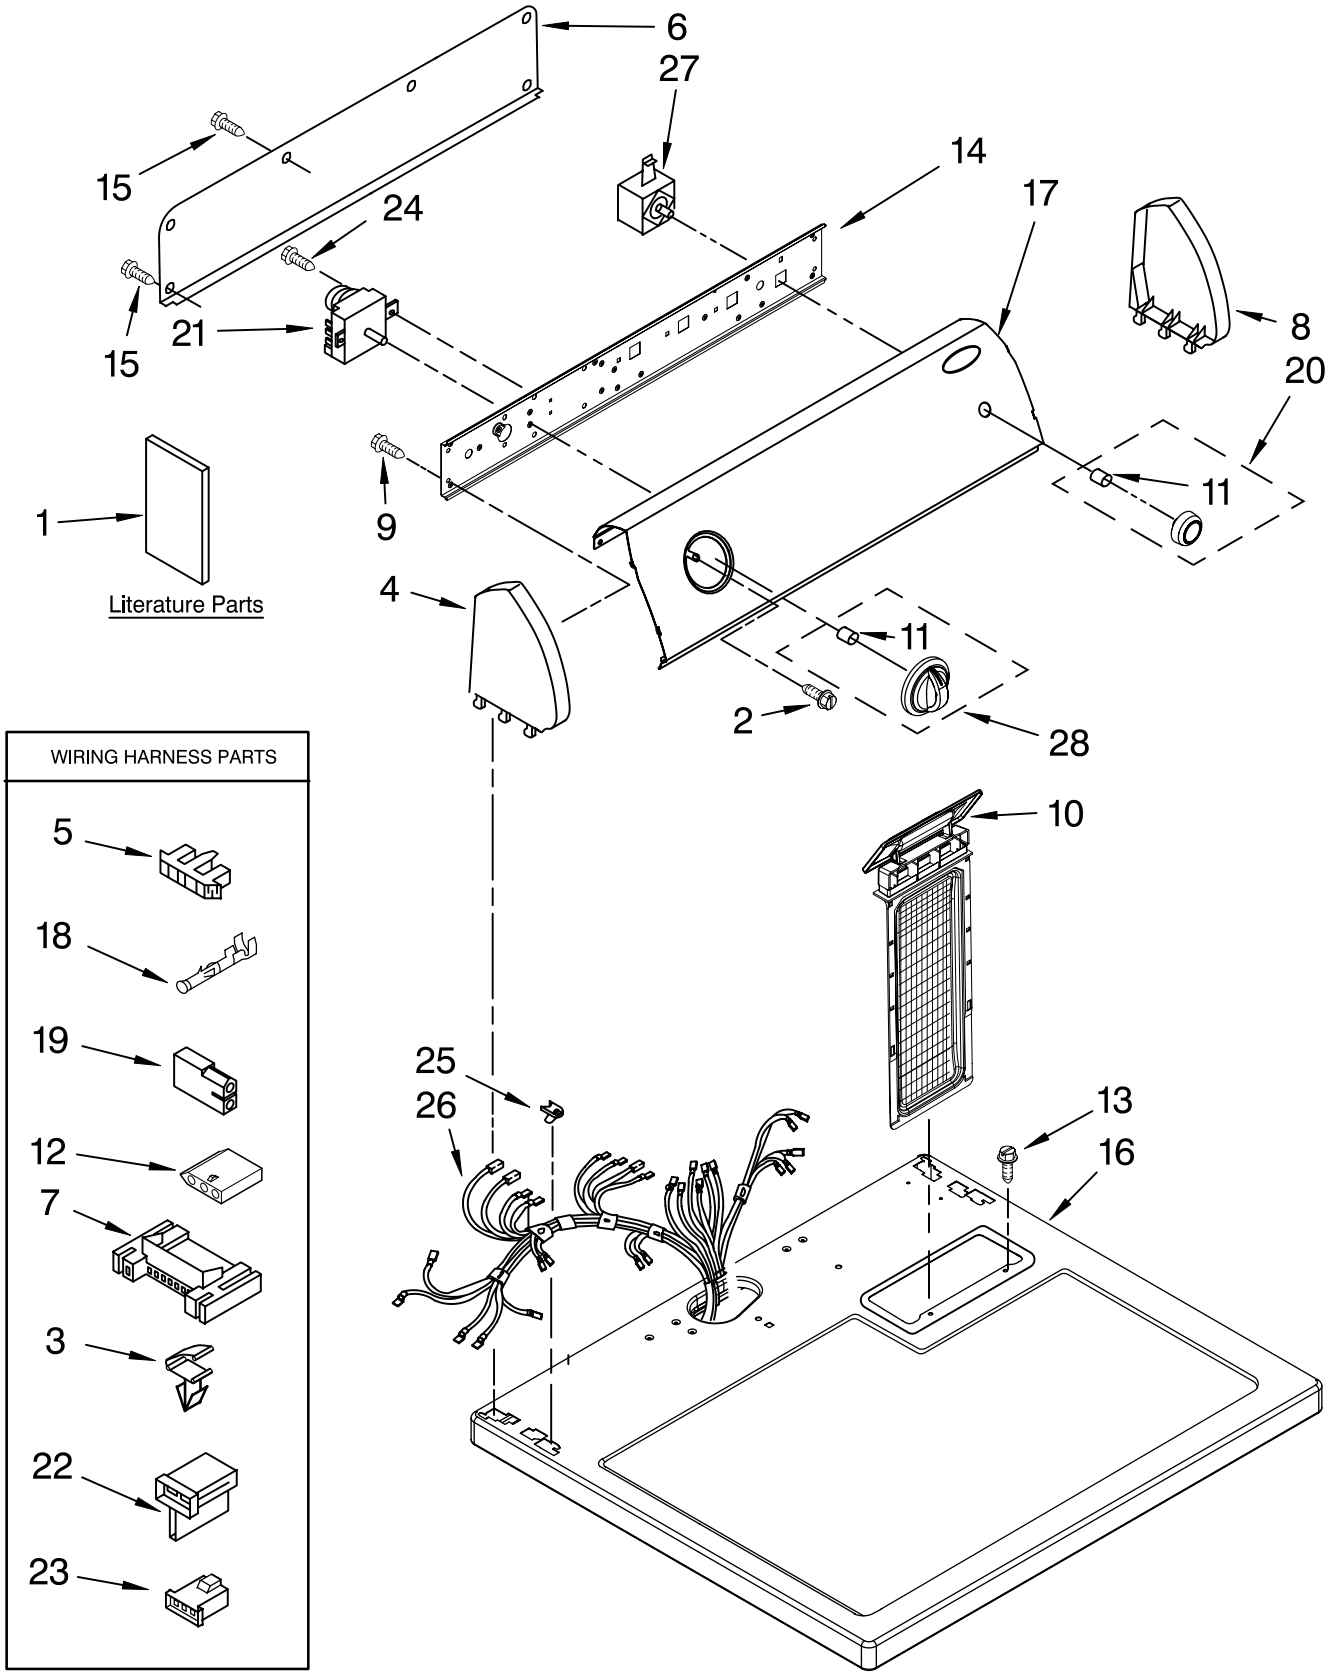

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

TOP AND CONSOLE PARTS

For Model: 1CWGD5300SQ0
(White)

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	8562582	Installation Instructions
	W10042960	Sheet, Cycle Feature
	8578183	Use & Care Guide
	8576793	Wiring Diagram
		Following May Be Purchased
		DO−IT−YOURSELF REPAIR MANUALS
	677818	Dryer
2	8533951	Screw, Grounding
3	3394427	Clip, Harness
4	8271365	Cap, End (L.H.)
5	3397269	Connector (Timer)
6	8274261	Panel, Rear Console
7	3395683	Housing, Connector (Motor)
8	8271359	Cap, End (R.H.)
9	388326	Screw, Console
10	8557857	Screen, Lint
11	8536939	Clip, Spring
12	3936144	Connector
13	688983	Screw, 8−18 x 5/8
14	8544895	Bracket, Control
15	693995	Screw, Hex Head
16	8557930	Top
17	8578844	Panel−Control
18	94614	Terminal
19	717252	Receptable, 2−Way
20	8066065	Knob, Control
21	3976584	Timer Assembly (60 Hz.)
22	3403499	Connector, 2−Position (Gas Valve)
23	3403498	Connector, 3−Position (Gas Valve)
24	8533971	Screw, 8−18 x 5/16
25	357213	Nut, Push−In (2)
26	8299876	Harness, Wiring
27	3977456	Switch, Push−To−Start
28	8566061	Timer Knob Assembly

CABINET PARTS

For Model: 1CWGD5300SQ0
(White)

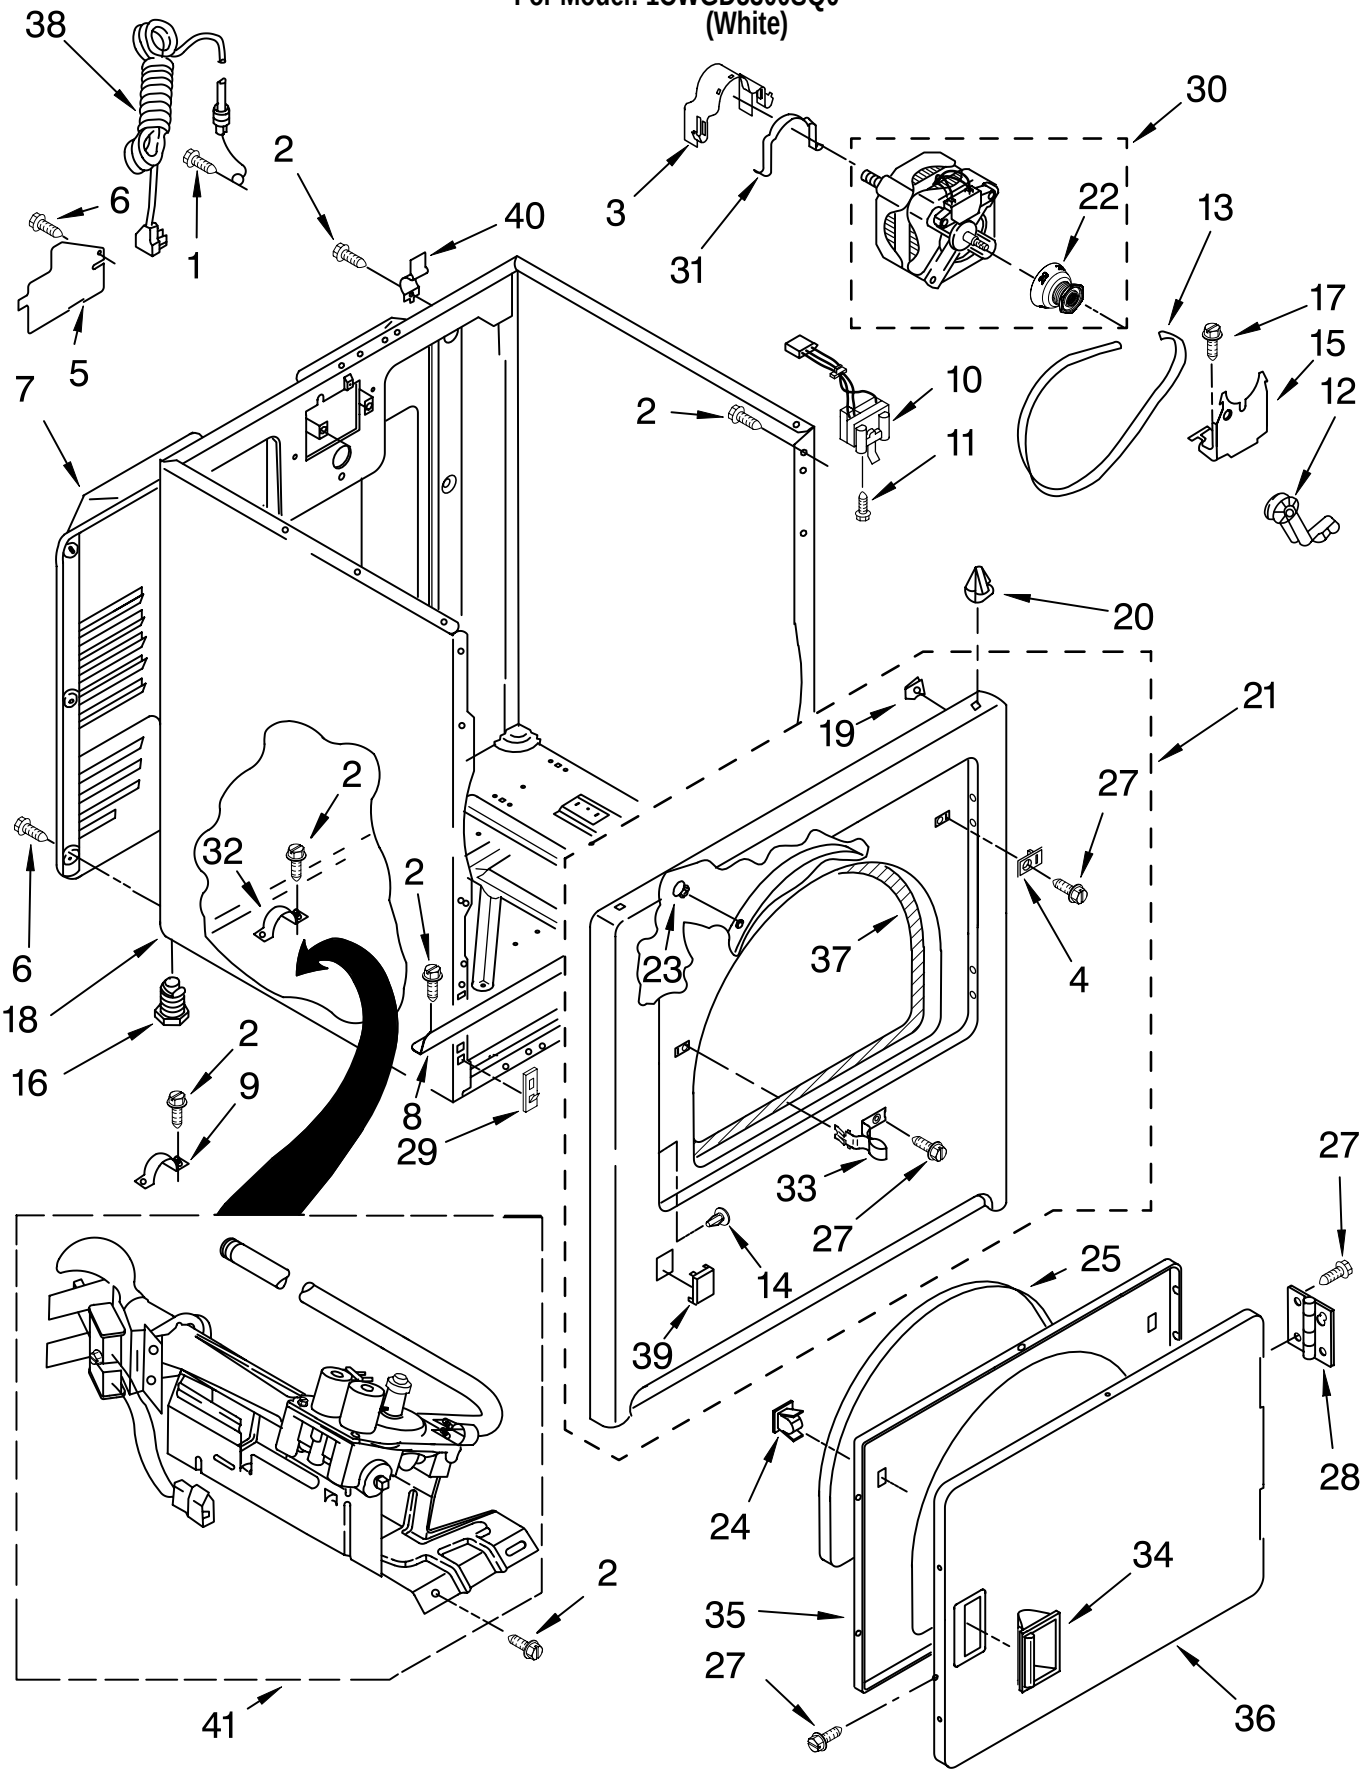

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CABINET PARTS

For Model: 1CWGD5300SQ0
(White)

Illus. No.	Part No.	DESCRIPTION
1	697776	Screw, 10−32 x 5/8 (External Ground)
2	343641	Screw, 10−16 x 1/2
3	3404162	Clamp, Motor (W/Shield)
4	3403630	Plug, Strike Door
5	3396795	Cover, Block
6	693995	Screw, Hex Washer Head
7	3396805	Panel, Rear
8	8541400	Bracket, Cabinet
9	3980175	Clamp, Elbow
10	3406109	Door Switch Assembly
11	697773	Screw, 6−20 x 7/8
12	691366	Idley & Pulley Assembly
13	W10131364	Belt−Drive
14	3404413	Plug, Hinge Hole
15	348780	Base, Motor
16	3392100	Foot, Dryer
	279810	Foot − Optional (Extended Length Package Of 2 (Not Included)
17	3400500	Bolt−5/16−18 x 3/4
18	8530603	Cabinet (Includes Illus. 8)
19	98234	Clip, Ground (2)
20	690363	Lock, Front Top (2)
21	3403447	Panel Front
22	8066184	Pulley, 60 HZ.
23	685203	Clip, Felt Pad (2)
24	3389441	Catch, Door Assembly
25	3405246	Seal, Door
27	342055	Screw, 8−18 x 1/2
28	3405514	Hinge, Door
29	3394083	Clip, Front Panel
30	8066206	Motor Assembly 60 HZ.
31	660658	Clamp, Motor
32	341029	Clamp, Pipe
33	3403431	Strike, Panel
34	8566059	Handle, Door
35	3402341	Door, Rear
36	3402335	Door, Front
37	3406129	Seal & Bearing Assembly
38	344020	Cord, Power
39	3394975	Plug, Front Panel
40	8066217	Hinge, Top (2)
41	8318272	Burner Assembly 60 HZ. (See Pages 7 & 8 For Further Burner Breakdown)

BULKHEAD PARTS

For Model: 1CWGD5300SQ0
(White)

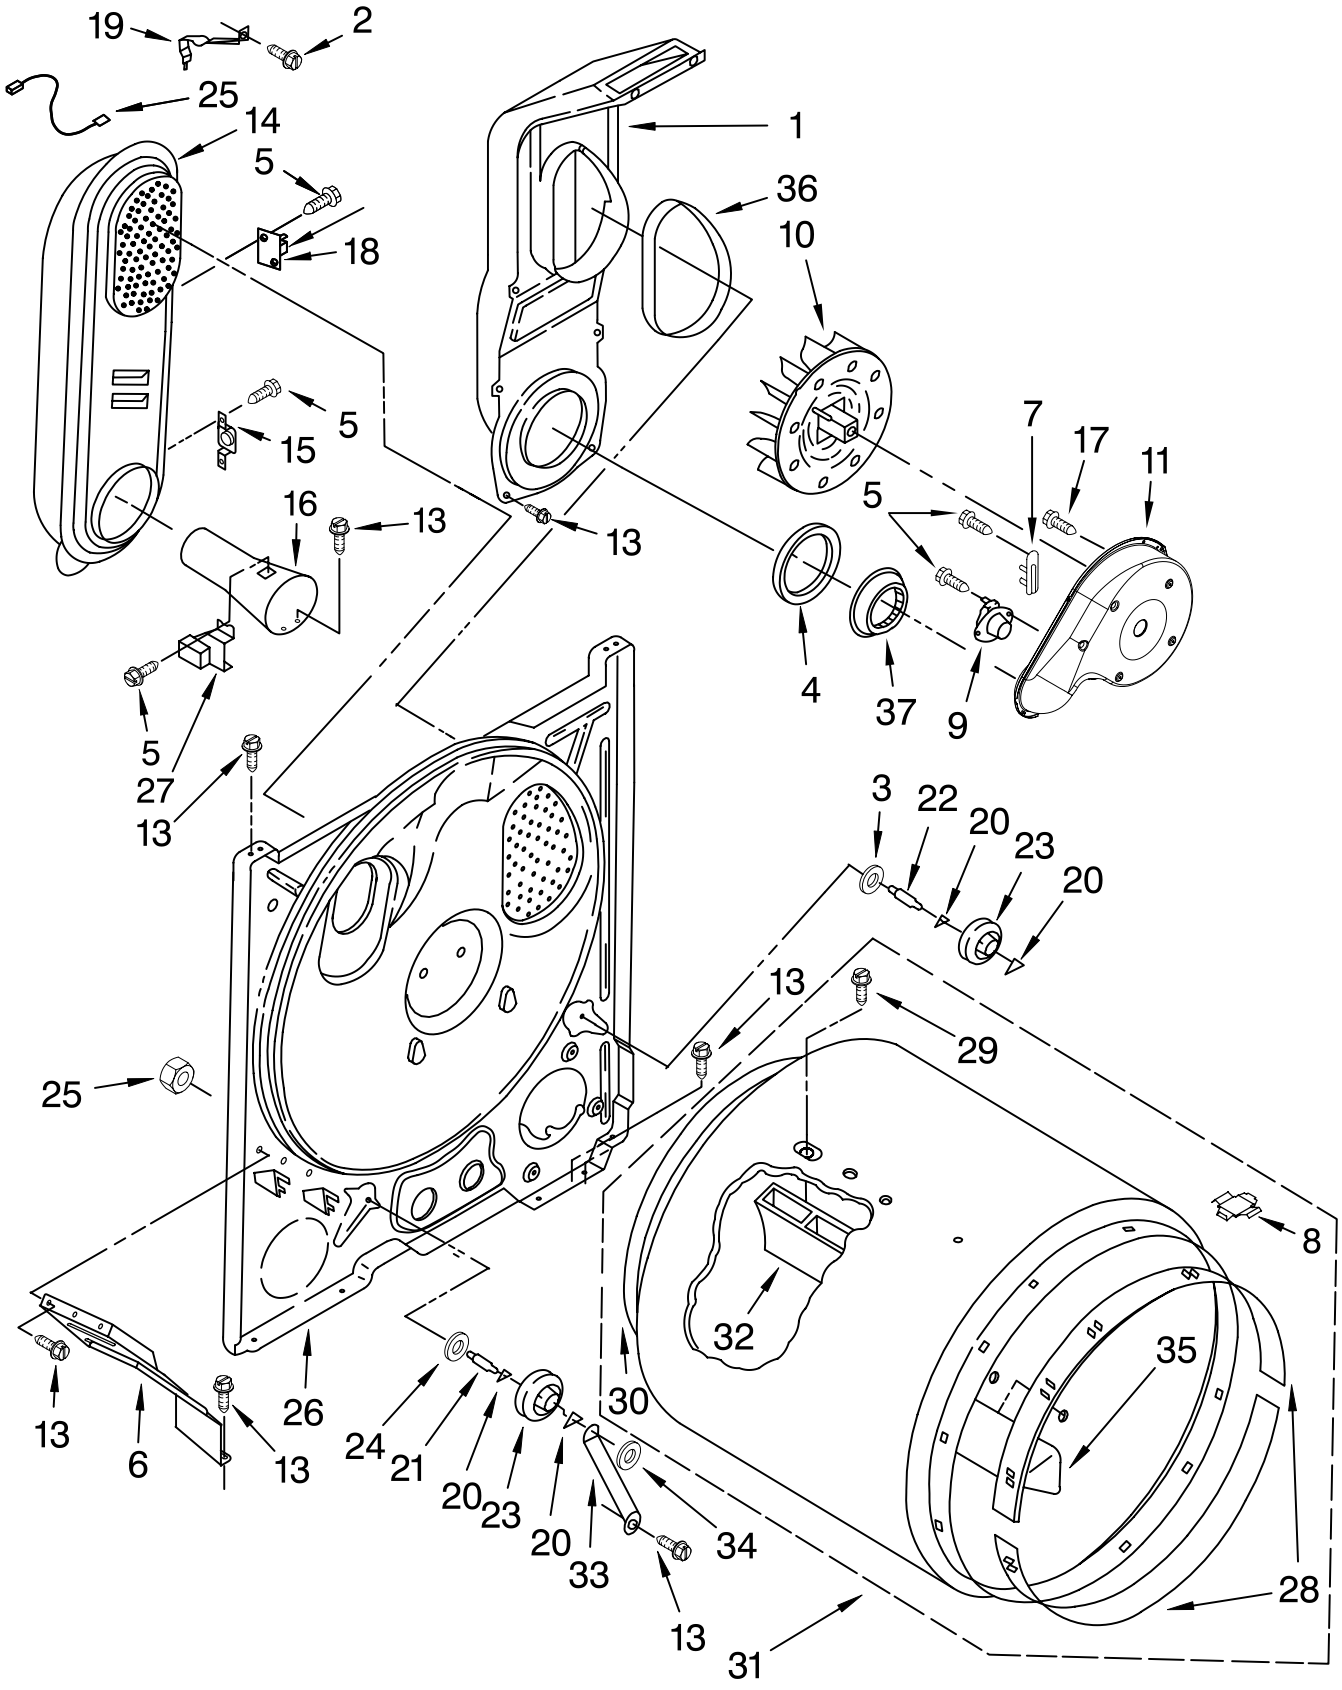

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

BULKHEAD PARTS

For Model: 1CWGD5300SQ0
(White)

Illus. No.	Part No.	DESCRIPTION
1	348368	Lint Chute Assembly
2	489463	Screw, 8−18 x 5/8
3	3388703	Washer−Support
4	347139	Seal, Lint Chute
5	90767	Screw, 8−18 x 3/8
6	3406022	Bracket, Bulkhead
7	3392519	Fuse, Thermal
8	8066086	Drum Hole Plug
9	3387134	Thermostat, Internal−Bias
10	694089	Wheel, Blower
11	8577230	Housing, Blower
12	8066155	Clip
13	343641	Screw, 10−16 x 1/2
14	8530285	Box, Heater
15	3403140	Thermostat, 205°F (96°C)
16	8066049	Funnel, Burner
17	3390647	Screw, 8−18 x 1/2
18	280010	Kit, Thermal Cut−Off (Includes Illus. 15)
19	3401707	Wire, Jumper
20	690997	Ring, Tri
21	3399506	Shaft, L.H.
22	3399507	Shaft, R.H.
23	3397590	Roller, Support
24	348197	Washer, Support
25	3359452	Nut, 3/8−16
26	3403491	Bulkhead
27	338906	Sensor, Radiant
28	692526	Ring, Bearing
29	97787	Screw, 11−16 x 3/4
30	3406130	Seal, Rear Drum
31	695587	Drum Assembly
32	692490	Baffle, Drum (2)
33	3976434	Bracket, Support
34	90296	Clip
35	3403636	Baffle, Drum (1)
36	339956	Seal
37	696302	Shield, Exhaust

8318272 BURNER ASSEMBLY

For Model: 1CWGD5300SQ0
(White)

USE WITH TYPE 1 − NATURAL
AND TYPE 4 LIQUEFIED PROPANE AND BUTANE GASES

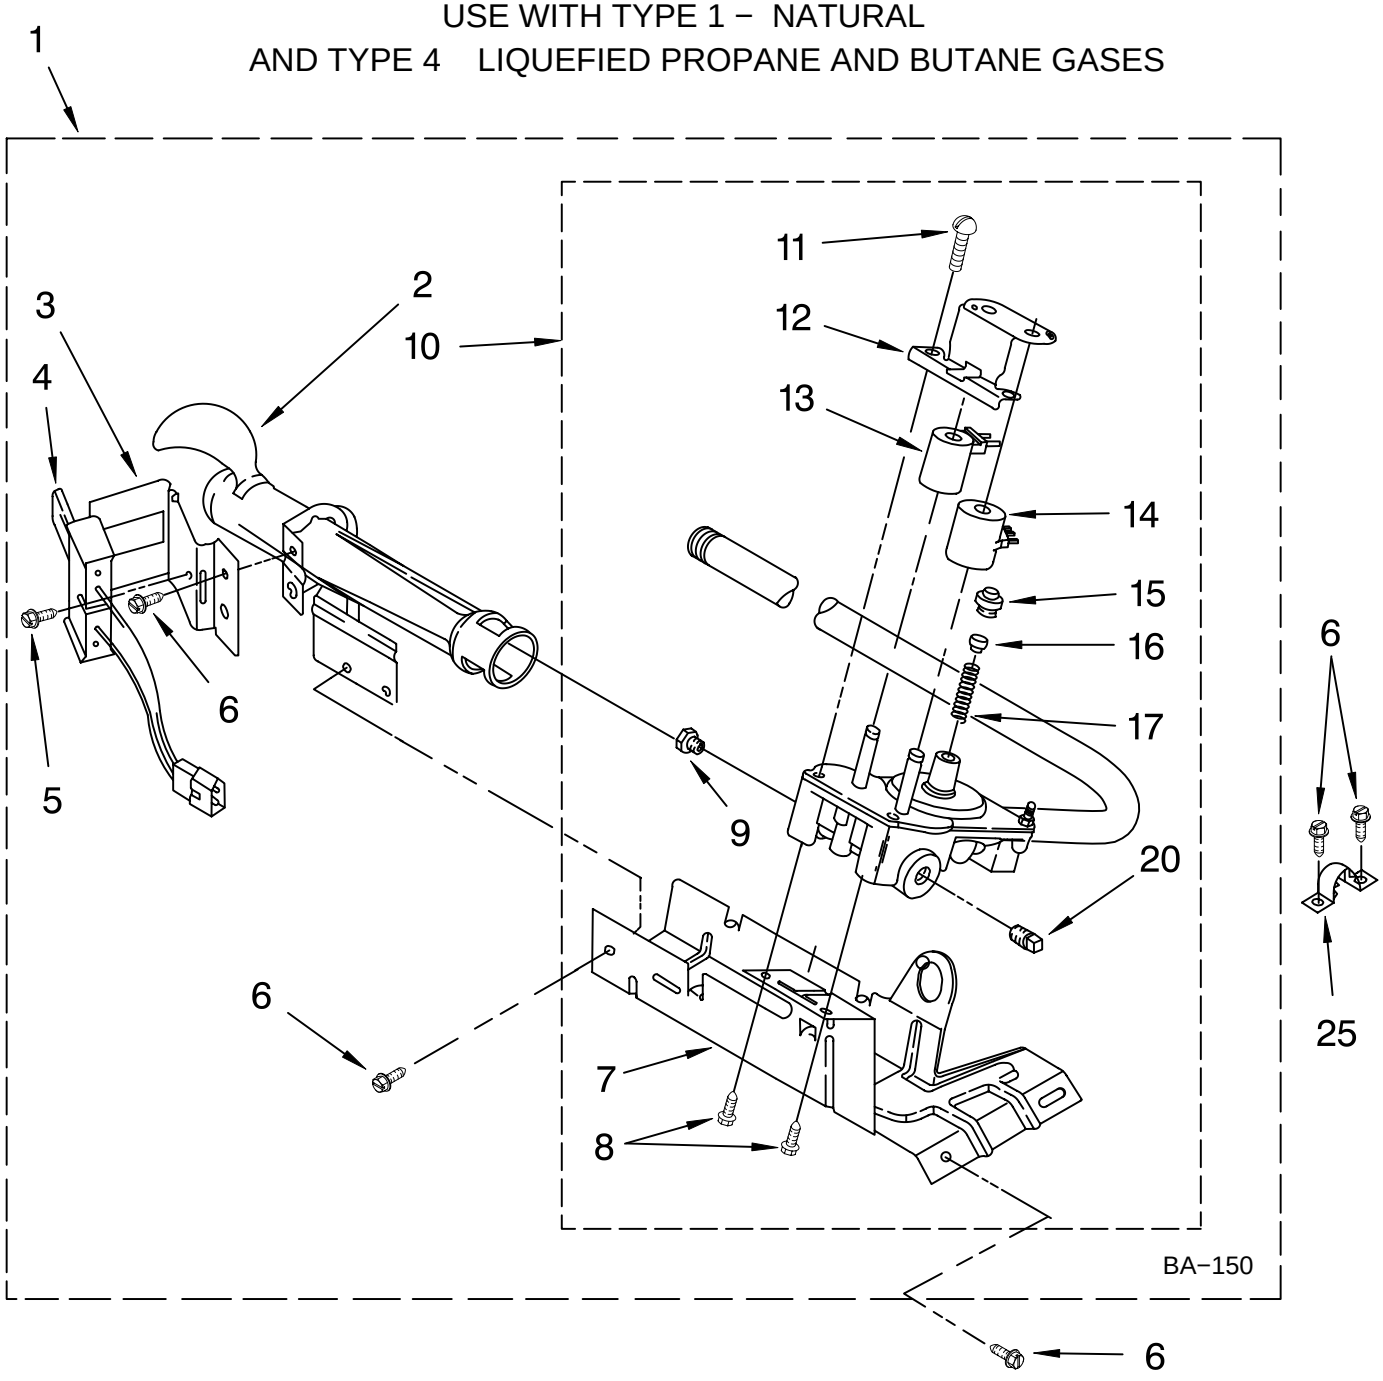

8318272 BURNER ASSEMBLY

For Model: 1CWGD5300SQ0
(White)

USE WITH TYPE 1 − NATURAL
AND TYPE 4 LIQUEFIED PROPANE AND BUTANE GASES

Illus. No.	Part No.	DESCRIPTION
1	8318272	Burner Assembly 60 Hz. (Type 1) (White Rodgers)
2	688617	Tube, Burner
3	694298	Bracket, Ignitor
4	686590	Ignitor
5	3393909	Screw & Washer (8−32 x 5/8)
6	343641	Screw, 10−16 x 1/2
7	693986	Base, Burner
8	3387057	Screw, 8−18 x 3/8
9		Orifice, Burner
	234826	Type 1
	229742	Type 4 (Butane)
	234868	Type 4 (Propane)
10	8318277	Valve, 60 Hz. (Includes Pipe & Illus. #7)
11	694421	Screw, 8−32 x 1/2 (2)
12	694538	Bracket, Coil
13	694540	Coil, 60 Hz. (2 Terminal) (Main)
14	694539	Coil, 60 Hz. (Split) (3 Terminal) (Pilot Position)
15	694424	Leak Limiter
16	694423	Screw, Regulator Adjustment
17	694422	Spring, Regulator
20	239822	Plug, Pipe
25	341029	Clamp, Pipe

Following Parts Not Illustrated

694572	Conversion Kit (Type 1) to Type (4) L.P.G.

BA−150

OPTIONAL PARTS (NOT INCLUDED)

For Model: 1CWGD5300SQ0
(White)

Illus. No.	Part No.	DESCRIPTION
		ACCESSORY PARTS
	279948	Kit, Dryer Repair
	346764	Kit, Hold−Down (Gas Dryer Mobile Home Installation)
	3404351	Dry Rack
	8522199	Kit, Dryer Vent Testing
		PAINT, TOUCH−UP (1/2oz.)
	72017	White
	4392899	Biscuit
		PAINT, PRESSURIZED SPRAY (12 oz.)
	350930	White
	4392901	Biscuit
	350938	Primer, Gray
		PAINT, BULK (1 qt.)
	799344	White (Uncut)